

// Honeycomb and Cellular Shades



CARE & CLEANING GUIDELINES

Alta Honeycomb Shades are 100% polyester and are treated to help resist dust, dirt, and stains.

Dusting Dust your shades regularly using an ordinary soft, clean cloth, dust cloth or mitt, feather-like duster, or cylindrical dust brush specially designed for shades.

Vacuuming For deeper cleaning, vacuum gently with a brush attachment.

Compressed Air/Hair Dryer Use a can of compressed air or a hand-held hair dryer on the COOL setting to blow off dust and debris.

Spot Cleaning Use a soft cloth or sponge moistened with lukewarm water and mild detergent. Blot gently to avoid creasing or damaging the fabric.

Bathtub Cleaning/Water Immersion

This method can be used for most, but not all, honeycomb fabrics. DO NOT USE with any SoftStyle fabrics or Blackout fabrics. DO NOT immerse headrails on any operating system other than standard cordlock.

Immerse entire shade in lukewarm water with a mild detergent and gently move the water around with your fingers. Rinse with clear water. Close shade before removing, and hold vertically allowing the excess water to drain off. Re-install the damp shade into the window. Lower the shade all the way down and allow to dry completely.

Ultrasonic Cleaning Professional ultrasonic cleaning is recommended for most, but not all, Honeycomb fabrics. DO NOT USE with any Blackout fabrics.

Injection/Extraction Cleaning This type of cleaning injects a cleaning solution into the fabric and immediately extracts the dirty solution. The service is typically performed in the home.

OPERATING INSTRUCTIONS

Cordless Lift Shades

Firmly grasp the handle or center of the bottomrail, then lift or lower the shade to the desired position.

Cordless Lift & Lock™ Shades

Push and hold the button on the bottomrail handle. Lift or lower the shade to the desired position, then release the button to lock the shade into place.

Motorization

Push the up or down button on the remote or PowerWand™ to raise or lower shades.

Standard Rectangular and Top-Down/Bottom-Up Shades

Raising Your Shade: Pull the cord toward the center of the shade (approximately 30° from vertical) until the lock is released. Continue pulling the cord at this angle until the shade reaches the desired position. To lock, move the cord back toward the edge of the shade and release.

Lowering Your Shade: Pull the cord toward the center of the shade (approximately 30° from vertical) until the lock is released. Let the cord slip slowly through your fingers until the shade reaches the desired position. To lock, move the cord back to the edge of the shade.

Continuous Cord Loop Shades

Pull gently on the front or back of the cord loop to lift or lower the shade.

NOTE: If the cord tensioner moves up the cord while operating, you have not secured it to the wall or window frame. You must do so for the shade to operate properly.

Vertical Application

Grasp the handle on the side rail and pull the shade back and forth across the window.

// Wood & Faux Wood Blinds



CARE & CLEANING GUIDELINES

Dusting Dust your blinds regularly using an ordinary soft, clean cloth, chemically-treated dust cloth or mitt, feather-like duster, or cylindrical dust brush specially designed for blinds.

Vacuuming For deeper cleaning, vacuum gently with a brush attachment.

Compressed Air/Hair Dryer

Use a can of compressed air or a hand-held hair dryer on the COOL setting to blow off dust and debris.

Spot Cleaning Faux Wood Blinds only.

Use a soft cloth or sponge moistened with lukewarm water and mild detergent if needed. DO NOT USE to clean Wood Blinds.

Bathtub Cleaning/Water Immersion

Faux Wood Blinds without cloth tapes only.
DO NOT USE to clean Wood Blinds.

Immerse entire blind in lukewarm water with a mild detergent and gently move the water around with your fingers. Rinse with clear water. Close blind before removing, and hold vertically allowing the excess water to drain off. Re-install the damp blind into the window. Lower the blind all the way down and allow to dry completely.

OPERATING INSTRUCTIONS

Aligning Your Blind: After the blind is installed, tilt it open, then raise and lower it several times. This will allow the cords and slats to align themselves.

Cordless Lift Blinds

Firmly grasp the center of the bottomrail, then lift or lower the blind to the desired position.

Cordless Lift & Lock™ Blinds

Push and hold the button on the bottomrail to lift or lower the blind. Release the button to lock the blind into place.

Motorization

Press button on remote to tilt slats open and closed.

Standard Blinds

Tilting The Slats: Pull down on either one of the tilt cords or twist the tilt wand until slats reach the desired position.

Raising Your Blind: Ensure slats are in the open position, then pull the lift cord downward until the blind reaches the desired height. Release the cord and the blind will automatically lock into place.

Lowering Your Blind: Gently pull the cord toward the center of the blind until the lock releases. Let the cord slip slowly through your fingers until the blind reaches the desired height. Move the cord toward the outside of the blind and release. The blind will automatically lock into place.